MetroCount® traffic data specialists

Text Reports

MTE User Manual - Report Fundamentals

4.03

MetroCount

Australia

15 O'Connor Close North Coogee WA 6163 Ph: 08 9430 6164 Fax: 08 9430 6187 Email: sales@metrocount.com

United Kingdom

Unit 15, Oliver Business Park Oliver Road Park Royal, London NW10 7JB Ph: 020 8782 8999 Fax: 020 8782 8737 Email: uksales@metrocount.com

United States

11820 West Market Place, Suite M Fulton MD 20759 Ph: 800 576 5692 Fax: 301 490 3521 Email: usasales@metrocount.com

www.metrocount.com



Text Reports

Editing

All text reports have fundamental word-processing properties:

- Text is completely editable.
- Fonts and colours may be changed.
- Objects, such as images can be inserted.
- Text can be copied into other programs.

The font used in a report can be set via the **Report font** option in the **Format** page of the report's Advanced Profile options. MCReport uses a non-proportional font (such as Courier) to construct columns in tables, so they will be unaffected by this option.

Font and colour can be changed locally in a report by selecting a block of text, right-clicking and selecting **Typeface** from the pop-up menu. This is useful for manually highlighting certain figures in a report.

The normal view of a report is a continuous stream of text. MCReport automatically inserts hidden page break characters at appropriate places, such as the end of the Header Sheet. Manual page breaks may be inserted into a report at the cursor, by right-clicking and selecting **Page break** from the pop-up menu. Use the Print Preview to view how a report will be paginated when printed.



Note: Remember that any manual editing of a report will be lost when a report is recalculated. A report is automatically recalculated when any changes are made to the report's Local Profile or tagged datasets.

Text reports can be saved by selecting **File** » **Save report as** from MCReport's main menu. Reports can be saved in Rich Text Format (RTF), which includes all the font and formatting information, or plain text (TXT).

The **Save file** dialog always defaults to the **Folder for report output** option in MCReport's Global Settings, accessible by selecting **Tools** » **Settings** from MCReport's main menu.

Zooming

Text reports can be zoomed on-screen, without affecting the actual font size or printed output. Simply click the **Zoom** button on MCReport's main toolbar, and select the desired zoom level. Note that only a zoom level of **Actual Size** will display a page outline. For a true indication of printed output, use the Print Preview.

🔁 MCReport - [Weekly	Vehicle-1]	
😰 File Edit View	Graph Tools Window Help	- 8
📕 🎒 🗟 🛅 🎮	`≤® [™] ₽₽0 ₹8004 <mark>0</mark>	50% 70%
	<u>MetroCount Tra</u> Weekly Vehi	80% 90%
WeeklyVehicle-1		Actual Size
<u>Datasets:</u> Site: Direction:	[35291] GRT.NORTHERN HWY SOUTH 1 - North bound, A hit first. Lane: 0	120% 150% IOkm/h> 200%
Survey Duration: File: Identifier:	13:00 Monday, 20 September 1993 => 1= UrbanHwy.ec0 (Demo FB) C355 Rev 9.02 6/3/1993 (c) 1993 Microco	4.24 monuay, 27 September 1993
Algorithm: Data type:	Factory default Axle sensors - Paired (Class/Speed/Cour	
Ready		NUM

Zooming a text report

www.metrocount.com

Copyright© 1991, 2013 Microcom Pty Ltd. All rights reserved. MetroCount, Traffic Executive, MCSetup, MCSetLite, MCReport, MCTools, Microcom and Microcom Pty Ltd, and the MetroCount and Microcom Pty Ltd logo, are trademarks of Microcom Pty Ltd. All other trademarks are the property of their respective owners. Other Microcom intellectual property including Patents and designs may be protected by international law. The furnishing of this software, the accompanying product or any related documentation or materials does not give you any license to this intellectual property.