

# Report Types

## MTE User Manual - Getting Started with Data Analysis

4.03

### MetroCount

#### Australia

15 O'Connor Close  
North Coogee WA 6163  
Ph: 08 9430 6164  
Fax: 08 9430 6187  
Email: [sales@metrocount.com](mailto:sales@metrocount.com)

#### United Kingdom

Unit 15, Oliver Business Park  
Oliver Road  
Park Royal, London NW10 7JB  
Ph: 020 8782 8999  
Fax: 020 8782 8737  
Email: [uksales@metrocount.com](mailto:uksales@metrocount.com)

#### United States

11820 West Market Place, Suite M  
Fulton MD 20759  
Ph: 800 576 5692  
Fax: 301 490 3521  
Email: [usasales@metrocount.com](mailto:usasales@metrocount.com)


[www.metrocount.com](http://www.metrocount.com)

# Report Types

## Overview

The **Report Vortex** is the report selection stage of the Report Wizard. Reports are primarily grouped by their mode of analysis, **Classification** or **Event Count**, represented by the two pages at the top. Reports are then sub-grouped by output format:

- **Tables** - pre-formatted, paginated text reports, and continuous text reports with user-definable columns and export options.
- **Charts** - graphical reports, such as pie charts, time-based plots, dispersion plots and data-audit charts.
- **Special** - generic and "standard" report formats.

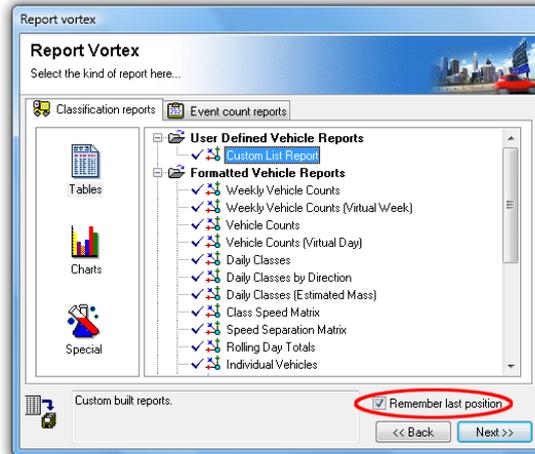

### Selecting a report



*Note: The **Remember last position** option automatically selects the last report that was generated - useful when generating several of the same report.*

# Classification versus Event Count Reports

## Classification Analysis

Classification analysis requires datasets collected using a Classifier Layout, where the A and B axle sensors are placed in parallel and a known distance apart. From this, MCRReport derives **vehicles**.

Firstly, MCRReport performs the complex task of examining the raw data and partitioning groups of sensor hits into likely vehicles. This is based on a number of time and distance parameters determined by MCRReport.

The next step is to determine the axle configuration of each vehicle. The first A and B hit pair in the group determines the direction of the vehicle, and the speed of the vehicle, based on the sensor spacing. From the speed, the time between the remaining hit pairs determines the spacing between axles.

The final step is to apply a classification scheme, based on the axle spacings in the vehicle. MCRReport offers a choice of standard and special-purpose classification schemes, called **OEM Schemes**. Other classification schemes can be added to MCRReport using user-definable **External Schemes**.

From here, the set of vehicles can be filtered, and formatted into a vast array of reports.

## Event Count Analysis

Event Count analysis treats the raw A and B sensor hits as user-selectable events - usually counts. MCRReport refers to the definition of an event as the **Count Method**, which may be one of the following:

- raw counts,
- counts divided by 2,
- counts divided by a custom factor,
- gaps above a certain length (in seconds), or
- following gaps, defined as a starting gap and a following gap.

Datasets collected using a Count Layout should only be analysed using Event Count reports. Attempting to analyse this type of data as vehicles will produce meaningless results.

Classifier Layout datasets can be optionally analysed with Event Count reports. These may be useful for obtaining approximate counts for periods where one sensor has failed, or for gap analysis.

## Multi-file Reports

Most reports support inclusion of multiple datasets in a single report. This may be necessary for combining results from multi-lane sites with one RSU per lane, and for time periods spanning multiple datasets.

There is an icon next to each report in the Report Vortex, indicating multi-file support as shown in the following table.


Icon	Description
	Report supports single dataset only
	Report supports multiple datasets

## Dataset Signatures

MetroCount datasets contain a digital Signature, which controls access to reports in the Report Vortex. A dataset's Signature *type* is inherited from the RSU that created it, such as **Plus** and **Regular**. The Signature type is one of the columns in both the File Tree and the File Management List.

Icon	Description
	Report available
	Report unavailable due to incompatible dataset Signature type

Reports that are unavailable due to an incompatible Signature type are indicated by a lock icon next to the report name. Selecting one of these reports and clicking the **Next** button will display a message indicating the required Signature type to use that report.

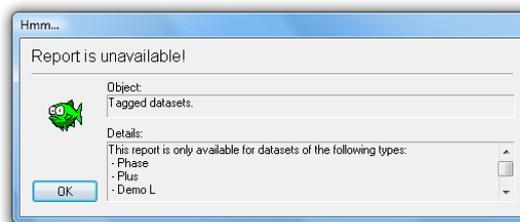

### Signature type incompatible

When tagging multiple datasets, report availability will be determined by the lowest Signature type.

**[www.metrocount.com](http://www.metrocount.com)**

Copyright© 1991, 2013 Microcom Pty Ltd. All rights reserved. MetroCount, Traffic Executive, MCSetup, MCSetLite, MCRReport, MCTools, Microcom and Microcom Pty Ltd, and the MetroCount and Microcom Pty Ltd logo, are trademarks of Microcom Pty Ltd. All other trademarks are the property of their respective owners. Other Microcom intellectual property including Patents and designs may be protected by international law. The furnishing of this software, the accompanying product or any related documentation or materials does not give you any license to this intellectual property.